


OLLI Audio / Visual Equipment

Classroom A

1. Turn on the **Main Power** (labeled with the green dot)
2. Power on the **projector** (white remote, red power button)
3. Power on additional equipment as needed:
 - a. Laptop
 - b. Microphones
 - c. DVD / VCR
 - d. Record Player

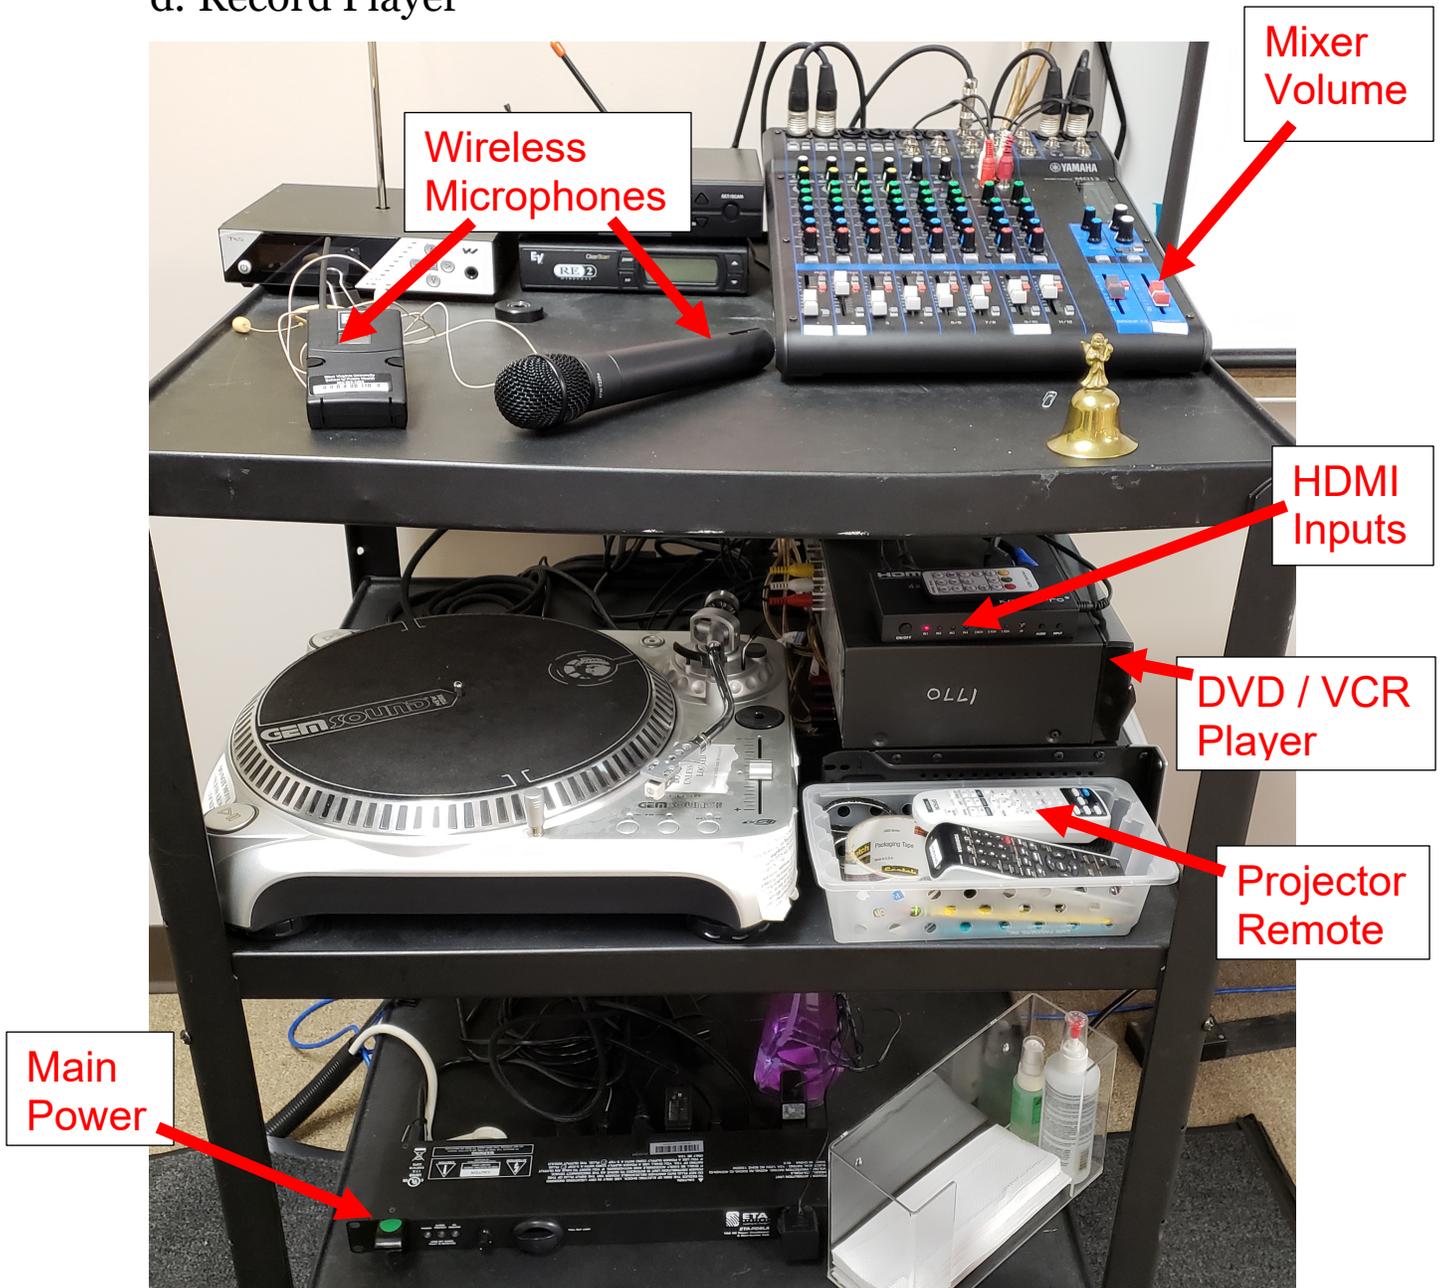

Please leave the equipment on for the next class!

-- Thank You!

OVER →

Additional Operations

Mixer Volume:

Master Volume Control controls the volume level for all devices (if you have issues, please ask the office staff for assistance).

Microphones:

- Multiple microphones can be used simultaneously
- We strongly encourage use of the headset mic to help our hearing impaired students
- Do NOT change the antenna settings on the unit or the box (if you have issues, ask the office staff for assistance)

HDMI Remote:

This allows you to switch between projecting a video **OR** the laptop screen.

- IN1 (HDMI 1) connects to the laptop
- IN2 (HDMI 2) connects to DVD/VCR

Laptop (HDMI 1):

1. Enter the user name that is on the label on the computer
2. Enter the password that is on the label on the computer

VCR/DVD (HDMI2):

You can switch between VCR or DVD using the DVD remote; both the remote and player buttons to switch between playing modes.

Record Player:

- Power button is on the back of the unit
- Sound is controlled by mixer



HDMI Remote



Projector Remote



DVD / VCR Remote

Hearing Assist Devices are available in the Main Office.

Office Staff are available to help! Please bother us!